




10.DETAIL DIAGRAM

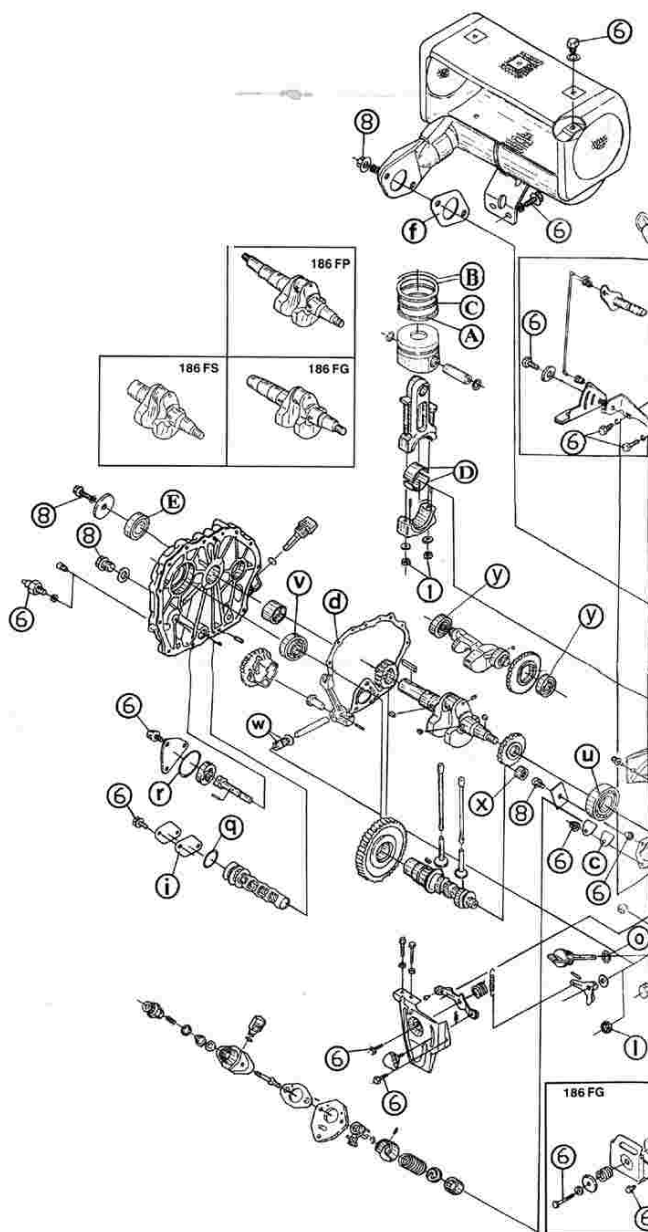

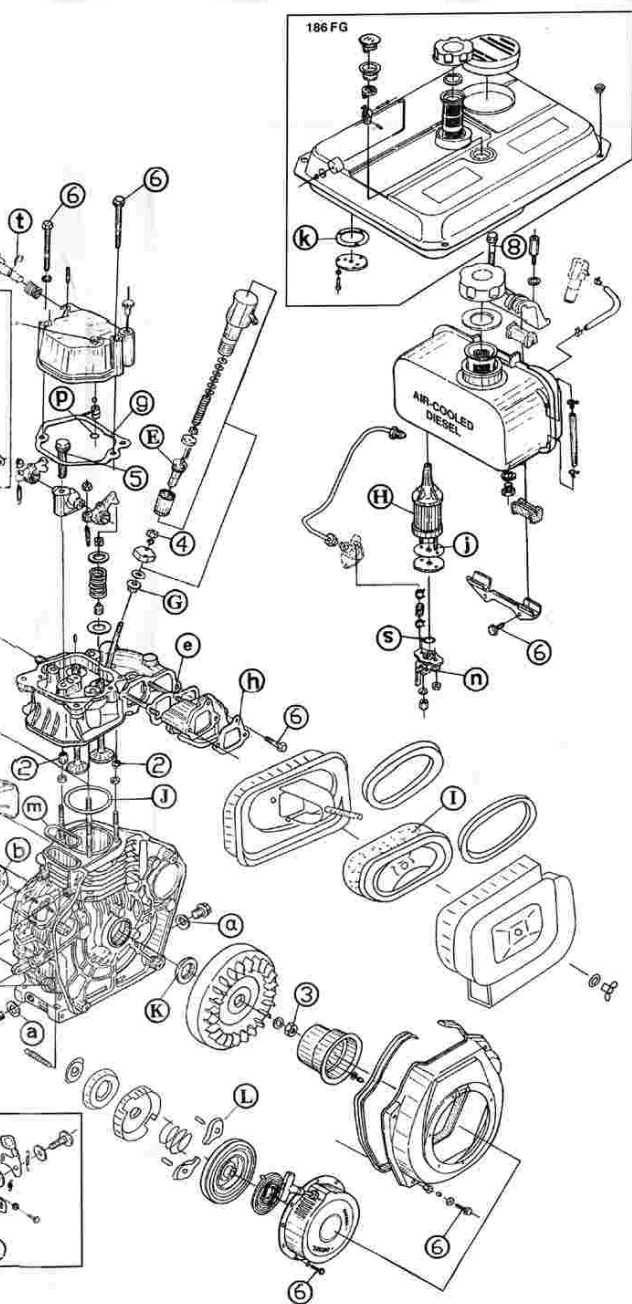

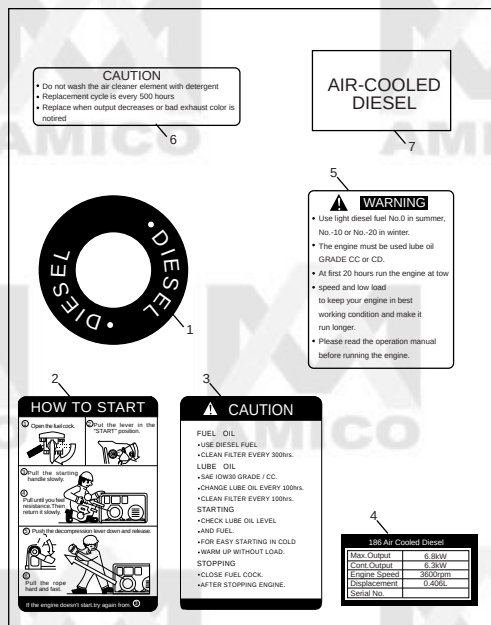

Ref No.	Part No.	Description	Qty.
1	186F ~ 18003	Trade Marks Tag I	1
2	186F ~ 18004	Start Operation Tag	1
3	186F ~ 18005	Caution Tag	1
4	186F ~ 18007	Model Tag	1
5	186F ~ 18009	Warning Tag	1
6	186F ~ 18012	Air Cleaner Tag	1
7	186F ~ 18013	Air Cooled Diesel Engine Tag	1

Torque of Main Bolt & Nut

Unit:N.m

Ref No.	Description	Torque
①	Rod Bolt Nut	40~45
②	Cyl Head Nut	54~58
③	Flywheel Nut	120~135
④	Nozzle Retainer Nut	8 ~10
⑤	Rocker Arm Tighten Stud	20~22
⑥	Bolt M6 (Nut)	10~12
⑦	Bolt M8 (Nut)	18~22 I

Full Gasket Sets

Ref No.	Part No.	Description	Qty.
a	186F-01100	Oil Plug Gasket Assem.	2
b	186F-10017	Fuel Injection Pump Shim Set	1
c	186F-10016	Seal Gasket	1
d	186F-01015	Crank Case Gasket	1
e	186F-02014	Air Intake Gasket	1
f	186F-02015	Exhaust Gasket	1
g	186F-03003	Bonnet Gasket	1
h	186F-07001	Air Cleaner Gasket	1
i	186F-09002	Oil Filter Plate Gasket	1
J	186F-10007	Fuel Oil Filter Gasket	1
k	186F-10013	Connecting Plate Gasket	1

Full Gasket Sets

Ref No.	Part No.	Description	Qty.
1	186F-11008	Lever shaft Seal	1

Rings

Ref No.	Part No.	Description	Qty.
m	186F-01007	O-RingZ	1
n	GB3452.1-92	O-Ring 11 x 1.9G	1
o	GB3452.1-92	O-Ring 24 x 2.4G	2
P	GB3452.1-92	O-Ring 10 x 1.9G	1
q	GB3452.1-92	O-Ring 25 x 2.4G	1
r	GB3452.1-92	O-Ring 34.5 x 1.8G	1
s	GB3452.1-92	O-Ring 13.2 x 1.9G	1
t	GB3452.1-92	O-Ring 12 x 1.8G	1


Bearings

Ref No.	Part No.	Description	Qty.
u	GB ! 276-94	Ball Bearing 6308/P5	1
v	GB/T276-94	Ball Bearing 6207/P5	1
w	GB290-89	Needle Bearing HK081210	2
x	GB290-89	Needle Bearing HK1512	1
Y	GB / 276- 94	Ball Bearing 6203	2

Easy Worn Parts


Ref No.	Part(Type) No.	Description	Qty.	Mounted to
A	186F-04100	Oil Ring Set	1	(4)Piston & Connecting Rod Assem.
B	186F-04001	First Gas Ring	1	(4)Piston & Connecting Rod Assem.
C	186F-04002	Second Gas Ring	1	(4)Piston & Connecting Rod Assem.
D	186F-04005	Crank Pin Bearing	2	(4)Piston & Connecting Rod Assem.
E	GB9877 ~ 1-88	Oil Seal B355010D	1	(1)Cylinder Block Assem.
F	11.433 ~ 172.001	Nozzle	1	(13)Fuel Nozzle Assem.
G	186F-02007	Spacer	1	(2)Cylinder Head Assem.
H	186F-t0300	Filter Element Assem.	1	(1)Fuel Tank & Pipe Assem.
I	186F-07100	Air Cleaner Element Assem.	1	(7)Air Cleaner Assem.
J	186F-0t012	Cyl. Head Gasket	1	(1)Cylinder Block Assem.
K	GB9877 ~ 1-88	Oil Seal B355008D	1	(1)Cylinder Block Assem.
L	186F-14008	Starter Ratchet	1	(14)Recoil Starter Assem.

(1)Cylinder Block Assembly

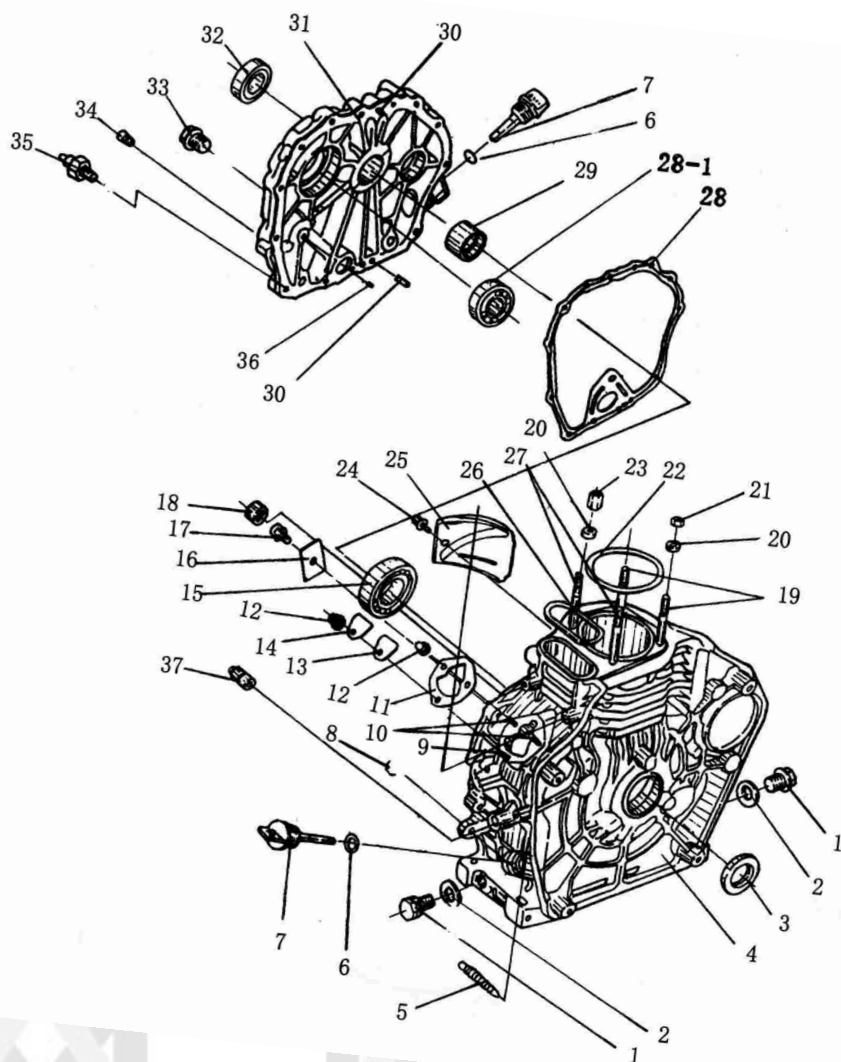



Ref No.	Part No.	Description	Qty.
1	186F-01017	Drain Plug	2
2	186F-01100	Oil Plug Seal Assem.	2
3	GB9877.1-88	Oil Seal B355010D	1
4	186F-01001	Cylinder Block	1
5	186F-11200	Fuel Controller Assem.	1
6	GB3452.1-92	O-Ring 24 x 2.4	2
7	186F-01002	Oil Depth Gauge	2
8	GB6173-86	Nut M10 x 1.25	1
9	186F-01012	Tighten Stud(Short)	1
10	186F-01001	Tighten Stud(Long)	2
11	186F-10017	Shim Set	2
12	GB6170-86	Nut M6	3
13	186F-10016	Seal Gasket	1
14	186F-10015	Seal Plate	1
15	GB/T276-94	Ball Bearing 6308	1
16	186F-01009	Retainer	1
17	GB5783-86	Bolt M8 x 12	1
18	GB290-89	Needle Bearing HK152015	1
19	186F-01003	Cylinder Head Bolt(Short)	2
20	186F-01005	Washer	4
21	186F-01004	Cyl. Head Nut(Short)	2
22	186F-01013	Cyl. Head Gasket	1
23	186F-01007	Cyl.Head Nut(Long)	2
24	GB5787-86	Bolt M6 x 20	2
25	186F-01211	Air Cover	1
26	186F-01008	O-Ring	1
27	186F-01006	Cyl.head Bolt(Long)	2
28	186F-01015	Crank Case Gasket	1
28-1	GB/T276-94	Ball Bearing 6207-P5	1
29	186F-01014	Main Bearing	1
30	GB 119-86	Pin8 x 10	2
31	186F-01016	Crank Case Cover	1
32	GB9877.1-88	Oil Seal B355008D	1
33	GB5787-86	Bolt M8 x 30	2
34	186F-01019	Plug	1
35	GB5787-86	Bolt M8 x 33.5	13
36	186F-01021	Plunger	3
37	GB290-89	Needle Bearing HK081210	1

(2)Cylinder Head Assembly

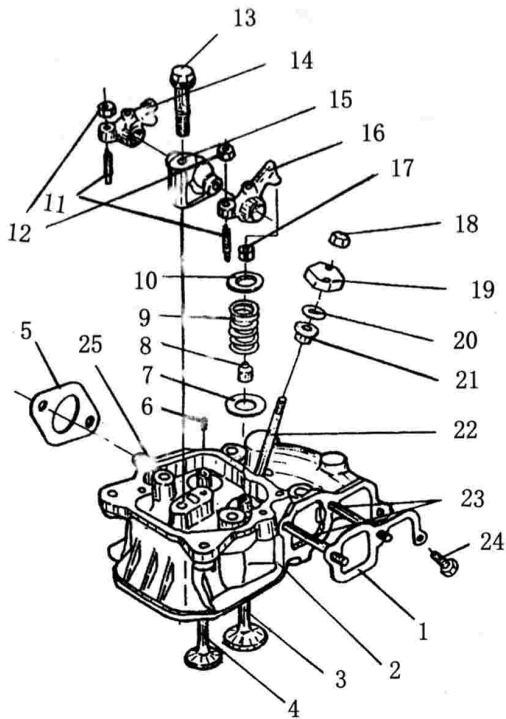


Ref No.	Part No.	Description	Qty.
1	186F-02014	Air Intake Gasket	1
2	186F-02202	Cylinder Head	1
3	186F- 02003	Intake Valve	1
4	186F-02004	Exhaust Valve	1
5	186F-02015	Exhaust Gasket	1
6	GB119-86	Pin B4 x 8	1
7	186F-02007	Washer	2
8	186F-02019	Valve duct Seal	2
9	186F-02005	Valve Spring	2
10	186F- 02002	Valve Spring Retainer	2
11	186F-02008	Valve Screw	2
12	GB6177-88	Nut M6	2
13	186F-02017	Rocker Arm Screw	1
14	186F-02012	Exhaust Valve Rocker Arm	1
15	186F-02006	Rocker Arm Support	1
16	186F-02013	Intake Valve Rocker Arm	1
17	186F-02001	Cotter	4
18	GB6177-88	Nut M6	2
19	186F-02009	Nozzle Retainer	1
20	186F-02018	Spacer Washer	1
21	186F-02011	Spacer	1
22	GB900-88	Stud AM6 x 50	2
23	GB900-88	Stud AM6 x 75	2
24	GB5787-86	Bolt AM6 x 25	3
25	GB899-88	Stud AM8 x 20	2

(3)Cyl. Head Bonnet Assembly

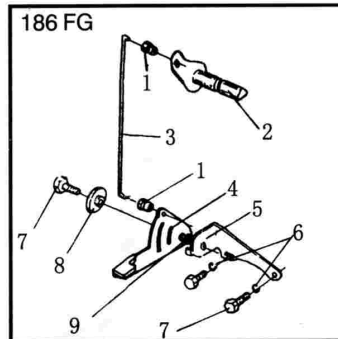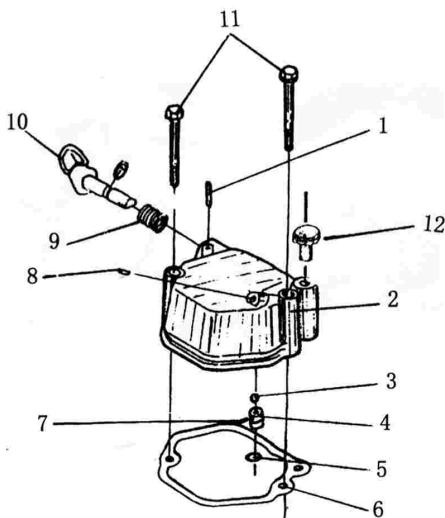


Ref No.	Part No.	Description	Qty.
1	GB119-86	Pin B3 x 16	1
2	186F-03001	Cyl. Head Bonnet	1
3	186F-03006	Ball	1
4	186F-03007	Breather Seat	1
5	GB3452.1-92	O-Ring 2 x 1.9	1
6	186F-03003	Bonnet Gasket	1
7	186F-03014	Pin	1
8	186F-03015	Plunger	1
9	186F-03004	Decompression Spring	1
10	GB3452.1-92	O-Ring 2 x 1.9	1
11	186F-03100	Decompression Shaft Assem.	1
12	GB5787-86	Blot M6 x 70	2
13	186F-03016	Oiling Screw Plug	1
186FG			
1	186FG-03012	Decompression Wire Collar	2
2	186FG-03100	Decompression Shaft Assem	1
3	186FG-03011	Decompression Wire	1
4	186FG-03009	Outer Decompression Handle	1
5	186FG-03008	Decompression Handle Suppor	1
6	GB97.1-85	Washer6	2
7	GB5783-86	Bolt M6 x 15	3
8	186FG-03013	Outer Decompression Handle Bushin	2
9	GB3452.1-92	O-Ring 2 x 1.9	1
10	GB6170-86	Nut M6	1

(4)Piston & Connecting Rod Assembly

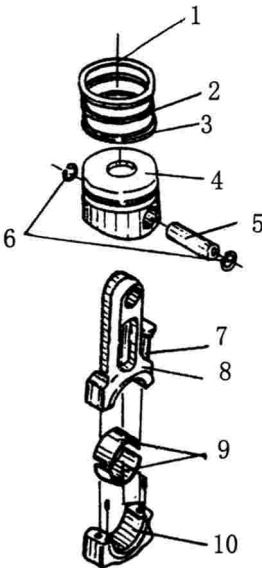


Ref No.	Part No.	Description	Qty.
1	186F-04100	Oil Ring Set	1
2	186F-04001	First Gas Ring	1
3	186F-04002	Second Gas Ring	1
4	186F-04003	Piston	1
5	186F-04004	Piston Pin	1
6	GB893.1-86	Washer 23	2
7	186F- 04008	Rod Bolt	2
8	186F-04007	Connecting Rod Body	1
9	186F-04005	Crank Pin Bearing	2
10	186F-04006	Crank Pin Box	1

(5)Fuel Nozzle Assembly

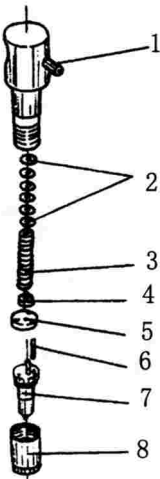


Ref No.	Part No.	Description	Qty.
1	11-435-127-003	Nozzle Holder Assem.	1
2	11-430-100-240	Shim Pack	1
3	11-430-613-001	Nozzle Spring	1
4	11-433-120-000	Spring Retainer	1
5	11-430-136-000	Stop Plate	1
6	11-433-261-004	Pin	2
7	11-433-172-001	Nozzle Valve	1
8	11-433-314-009	Nozzle Case Nut	1

(6)Crank Shaft & Flywheel Assembly

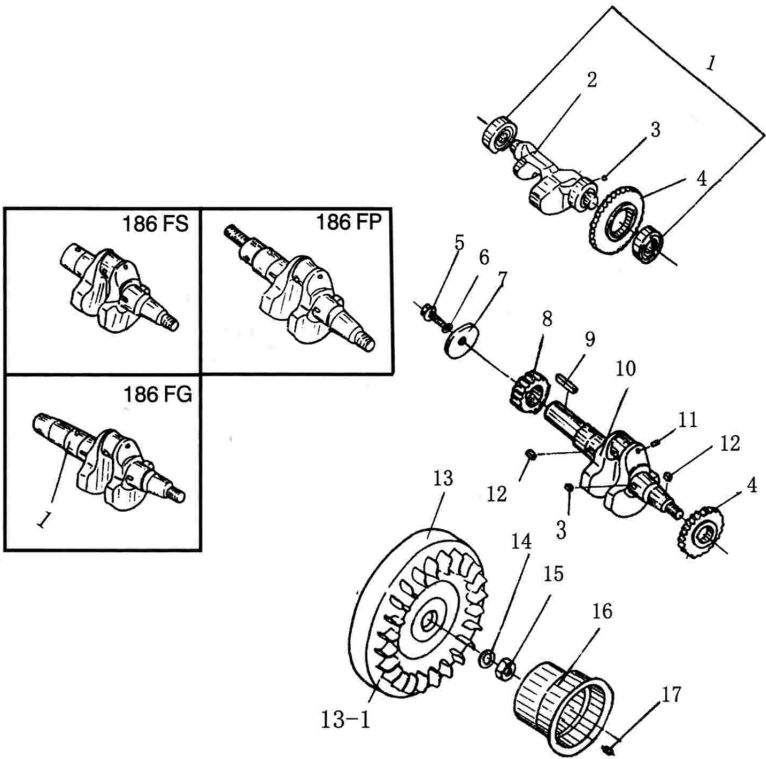


Ref No.	Part No.	Description	Qty.
1	GB / T276-94	Ball Bearing 6203/P5	2
2	186F-05301	Balancer Shaft	1
3	186F - 05006	Key	2
4	186F - 05004	Balancer Gear	2
5	186F-05007	Output End Tighten Stud	1
6	GB93-87	Washer10	1
7	186F-05005	Output End Washer	1
8	186F-05203	Crank Shaft Timing Gear	1
9	GB1096-79	Key6 x 50	1
10	186F-05201	Crank Shaft	1
11	186F-05202	Plunger6	1
12	GB1096-79	Key5 x 12	1
12-1	GB1096-79	Key5 x 14	1
13	186F-05101	Flywheel	1
14	186F-05003	Flywheel Nut Washer	1
15	186F-05002	Flywheel Nut	1
16	186F-05001	Starter Pulley	1
17	GB5787-86	Bolt M6 x 12	3
	186FG- 05006	Crank Shaft	1

(7)Air Cleaner Assembly

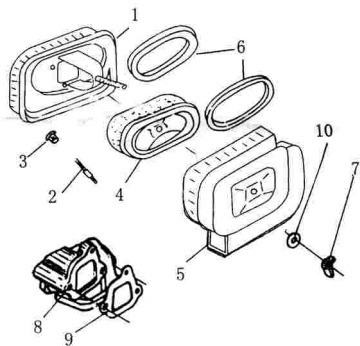


Ref No.	Part No.	Description	Qty.
1	186F-07300	Air Cleaner Bottom Case Assem.	1
2	186F-07301	Bolt	1
3	GB6177-86	Wing Nut M6	3
4	186F-07100	Air Cleaner Element Assem.	1
5	186F-07200	Air Cleaner Cover Assem.	1
6	186F-07203	Shockproof Sealing Assem.	2
7	GB62-88	Nut M8	1
8	186F-07401	Intake Pipe	1
9	186F-07001	Air Cleaner Gasket	1
10	GB97.1-85	Washer	1

(8)Camshaft Assembly

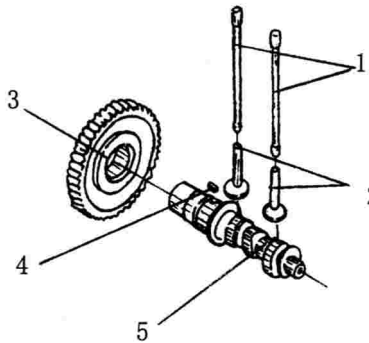


Ref No.	Part No.	Description	Qty.
1	186F-06100	Valve Rod Assem.	2
2	186F- 06003	Valve Tappet	2
3	186F- 06002	Camshaft Timing Gear	1
4	GB 1096-79	Key 5 x 12	1
5	186F- 06001	Camshaft	1

(9)Silencer Assembly

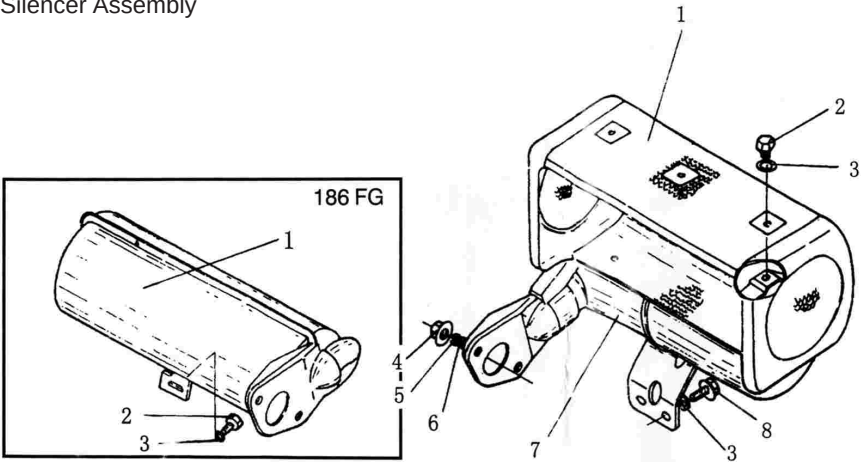


Ref No.	Part No.	Description	Qty.
1	186F- 08100	Case Welded Assem.	1
2	GB5787-86	Bolt M6 x 8	6
3	GB97.1-85	Gasket 6	8
4	GB6170-86	Nut M8	2
5	GB859-87	Washer8	2
6	GB97.1-85 -	Gasket 8 --	2
7	186F- 08200	Silencer Welded Assem.	1
8	GB5787-86	Bolt M6 ~ 12	2
186FG			
1	186FG- 08000	Silencer Assembly	1
2	GB5783-86	Bolt M8 x 15	1
3	GB97.1-85	Washer 8	1

(10)Lube Oil System

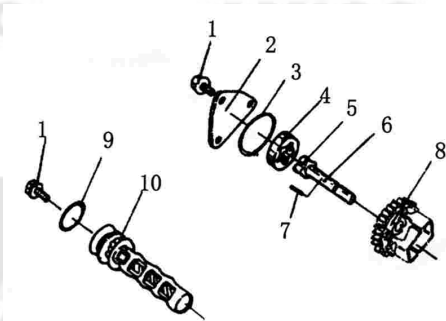


Ref No.	Part No.	Description	Qty.
1	GB5787-86	Bolt M6 x 12	3
1-1	GB5787-86	Bolt H6 x 14	1
2	186F- 09001	Oil Pump Butt Plate	1
3	GB3452.1-92	O-Ring34.5 x 1.8	1
4	186F-09101	Inner Rotator	1
5	186F- 09103	Outer Rotator	1
6	186F- 09102	Oil Pump shaft	1
7	GB 119-86	Pin B3 x 16	1
8	186F- 09002	Oil Pump Gear	1
9	GB3452.1-92	O-Ring25 x 2.4	1
10	186F- 09200	Oil Filter Assem.	1

(11)Fuel Tank Fuel Pipe Assembly

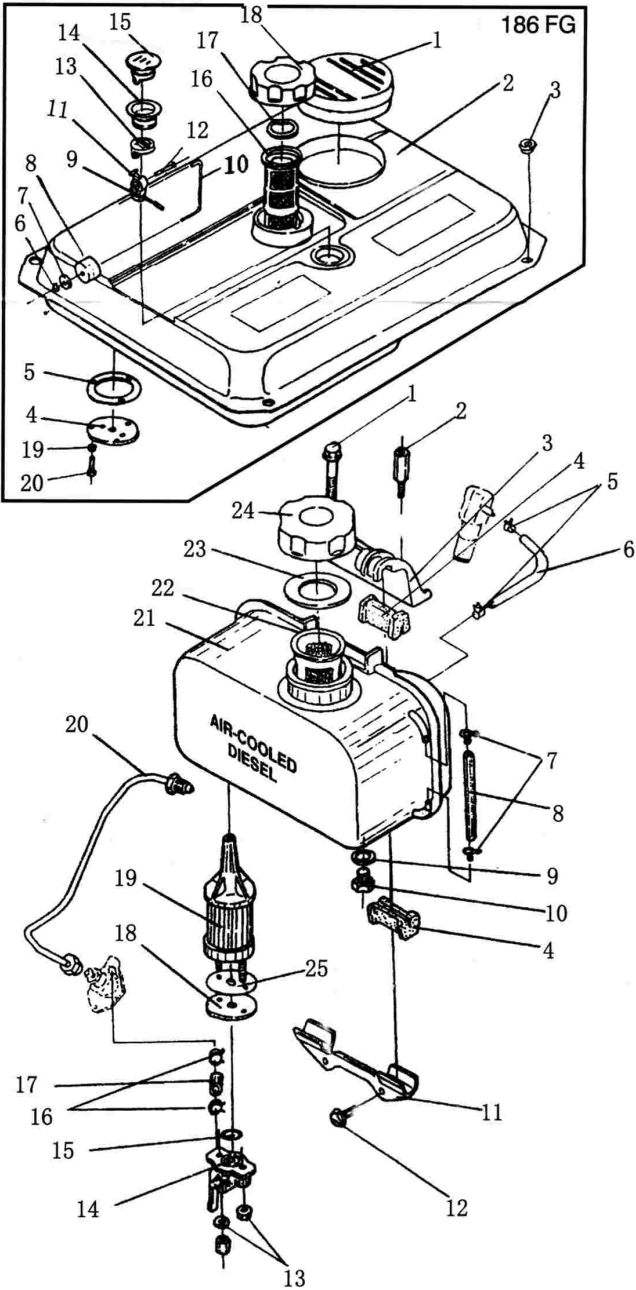


Ref No.	Part No.	Description	Qty.
1	GB5787-86	BoltM8 x 50	1
2	186F- 10003	Bolt	1
3	186F- 10001	Upper Stay	1
4	186F- 10002	Damper	4
5	186F- 10013	Clamp	2
6	186F- 10012	Fuel Oil Return Pipe	1
7	186F- 10005	Clamp	1
8	186F- 10006	Gauge Pipe	1
9	186F- 10008	washer	1
10	GB5786-86	BoltM12 x 1.25x 14	1
11	186F- 10600	Lower Stay Assem.	1
12	GB5787-86	BoltM6 ~ 14	2
13	GB6177-86	Nut M6	2
14	186F- 10400	Fuel Tank CockAssem.	1
15	GB3452-92	O-Ring13.2 x 1.8	1
16	186F- 10011	Clamp	2
17	186F- 10009	Fuel Oil Pipe	1
18	186F- 10007	Fuel Oil Filter Gasket	1
19	186F- 10300	Filter Element Assem.	1
20	186F- 10500	Fuel Injection Pipe Assem	1, 1
21	186F- 10200	Fuel Tank Welded Assem.	1
22	186F- 10004	Fuel Oil Filter	1
23	186F- 10102	Gasket	1
24	186F- 10100	Fuel Tank Cap Assem.	1
186FG			1
1	186FG- 10003	Adjusting Hole Cover	1
2	186FG- 10200	Fuel Tank Welded Assem.	4
3	186FG- 10004	Fuel Tank Damper	1
4	186FG- 10011	Connecting Plate	1
5	186FG- 10012	Connecting Plate Gasket	1
6	186FG- 10607	Circlip	1
7	GB97.1-85	Washer 2	1
8	186FG- 10601	Floater	2
9	GB869-76	Rivet 3 x 5	1
10	186FG- 10602	Swing Bar	1
11	186FG- 1060:	Fuel Indicator	1
12	GB869-76	Rivet 2.5 x 24	1
13	186FG- 10604	Pointer Support	1
14	186FG- 10606	Sealing Bush	1
15	186FG- 10605	Pointer Window Support	1
16	186FG- 10001	Filter Cup	1
17	186FG- 10002	Filter Cup Supporting Ring	1
18	186FG- 10100	Fuel Tank Cap Assem.	3
19	GB97.1-85	Washer 5	3
20	GB5786-86	Bolt M5 x 14	

(12)Fuel Injection Pump Assembly

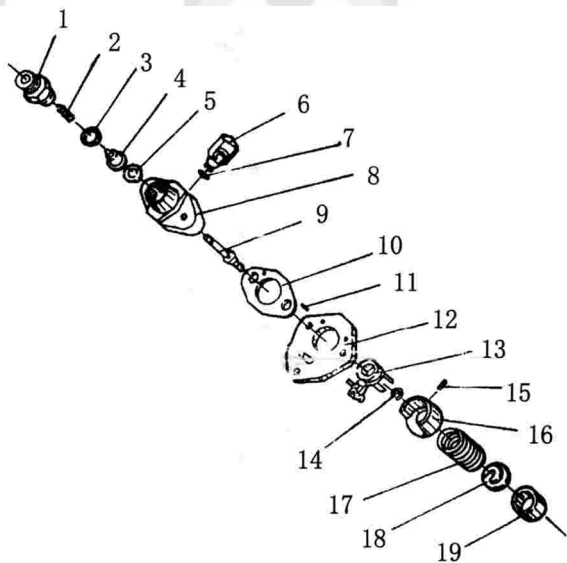


Ref No.	Part No.	Description	Qty.
1	11-413-372-001	Delivery Holder	1
2	11-414-628-001	Delivery Spring	1
3	11-410-100-005	Delivery Seal Gasket	1
4	11-418-502-108	Delivery Valve Core	1
5	11-418-600-203	Delivery Seat	1
6	11-413-373-001	Joint	1
7	11-400-210-004	O-Ring	1
8	11-415-101-001	F.I. Pump Body	1
9	11-418-205-501	Plunger	1
10	11-410-050-001	Shim Set	1
11	GB879-86	Pin2 x 6	2
12	11-415-700-004	Packing	1
13	11-410-326-003	Oil Control Muff Welded Assem.	1
14	11-410-224-001	Steel Wire Retainer	1
15	GB879-86	Pin3 x 8	1
16	11-410-506-001	Spring Seat	2
17	11-414-633-001	Plug Spring	1
18	11-410-330-003	Spring Seat	1
19	11-418-731-001	Tappet	1

(13)Governor & Control System

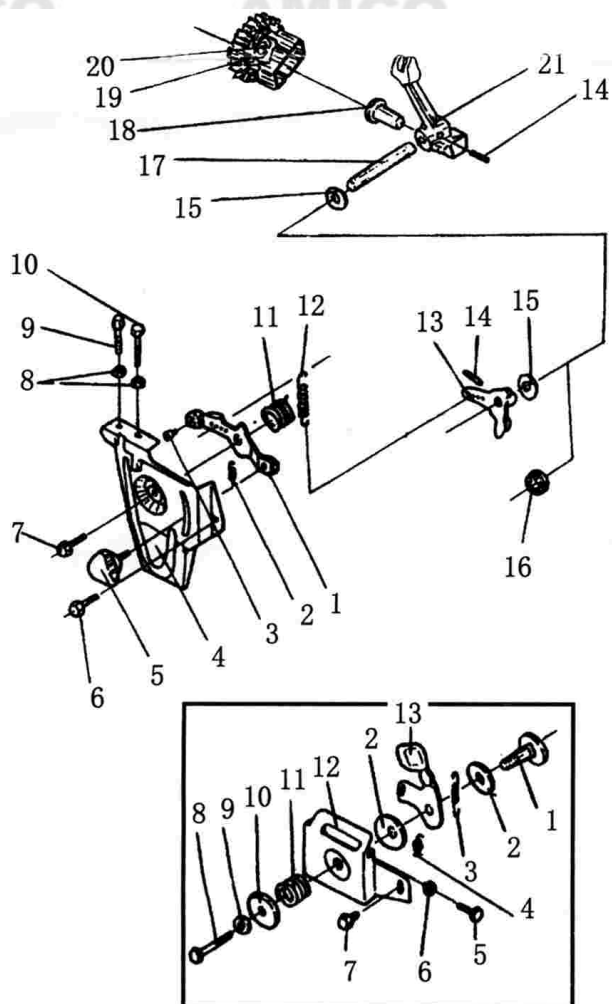


Rcf No.	Part No.	Description	Qty.
1	186F-11311	Control Handle	1
2	186F- 11006	Return Spring 1l	1
3	186F-11312	Pull Rod Head	1
4	186F-11401	Handle Bracket	1
5	186F- 11301	Handle	1
6	GB5787-86	Bolt M6 ~ 14	1
7	GB5787-86	Bolt M6 x 18	1
8	GB6172-86	Nut M6	2
9	186F- 11403	Pull Bolt	1
10	186F- 11402	High Speed Limit Screw	1
11	186F- 11005	Return Spring I	1
12	186F- 11007	Governor Spring	1
13	186F-11100	Lever Fork Part	1
14	GB117-86	Pin B3 x 22	2
15	186F- 11003	Washer	2
16	186FG-11008	Lever Shaft Oil Seal	1
17	186F-11102	Lever shaft	1
18	186F- 11004	Tappet Speed Regulator	1
19	186F- 11001	Fly Block	2
20	186F- 11002	Fly Block Pin	2
21	186F-11101	Lever Fork	1
186FG			
1	186FG- 11303	Handle Shaft	1
2	186FG- 11302	Handle shaft Gasket	2
3	186FG-11012	Governor Spring	1
4	186FG-11005	Return Spring	1
5	186FG- 11307	High Speed Limit Screw	1
6	GB97.1-85	Washer6	1
7	GB5783-86	Bolt M6 x 12	1
8	GB5782-86	Bolt M6 x 45	1
9	GB6173-86	Nut M10 x 1.25	1
10	186FG- 11306	Bowl Cap	1
11	186FG- 11305	Spring	1
12	186FG- 11302	Handle Bracket	1
13	186FG-11301	Handle	1

(14)Recoil Starter Assembly

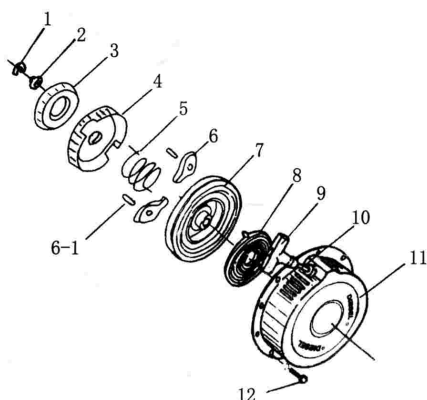


Ref No.	Part No.	Description	Qty.
1	GB6170-86	Nut M8	1
2	GB93-87	Washer 8	1
3	186F- 14002	Friction Plate	1
4	186F- 14004	Starter Ratchet Gland	1
5	186F- 14011	Return Spring	1
6	186F- 14008	Starter Katchet	2
6-1	186F- 14001-01	Starter Ratchet Axle	2
7	186F- 14001	Reel	1
8	186F - 14006	Spiral Spring	1
9	186F- 14007	Starter Handle	1
10	186F- 14005	Starter Rope	1
11	186F- 14100	Case Assem.	1
12	GB5787-86	Bolt M6 x 12	4


(15)Cooling Device Assembly

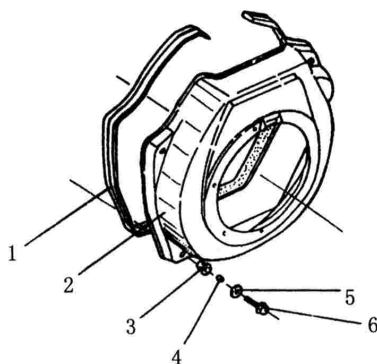

Ref No.	Part No.	Description	Qty.
1	186F- 17003	Shock Absorber Seat	1
2	186F- 17100	Fan Case Welded Assem	1
3	186F- 17002	Shock Absorber Bush	4
4	186F- 17001	Bush	4
5	GB96-85	Washer 6	5
6	GB5787-86	Bolt M6 x 22	5

11.DETAIL DIAGRAM

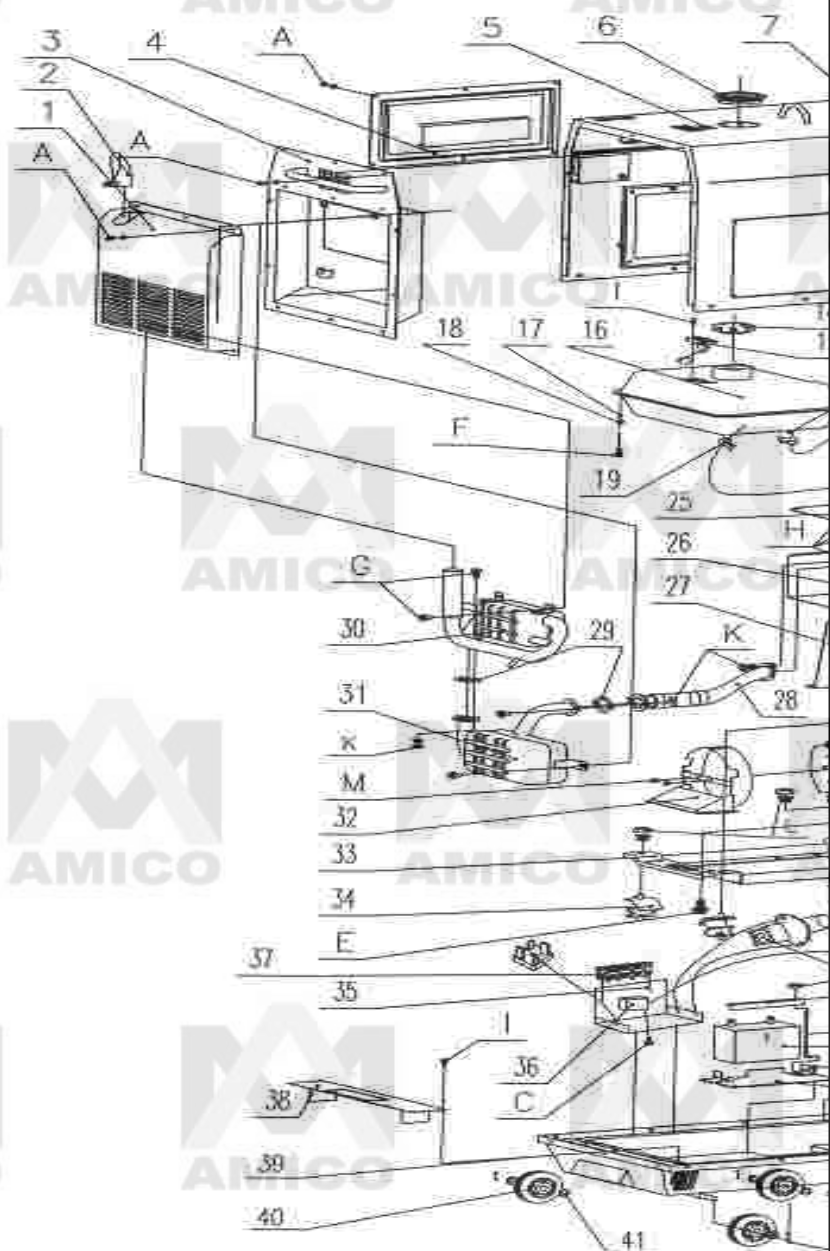


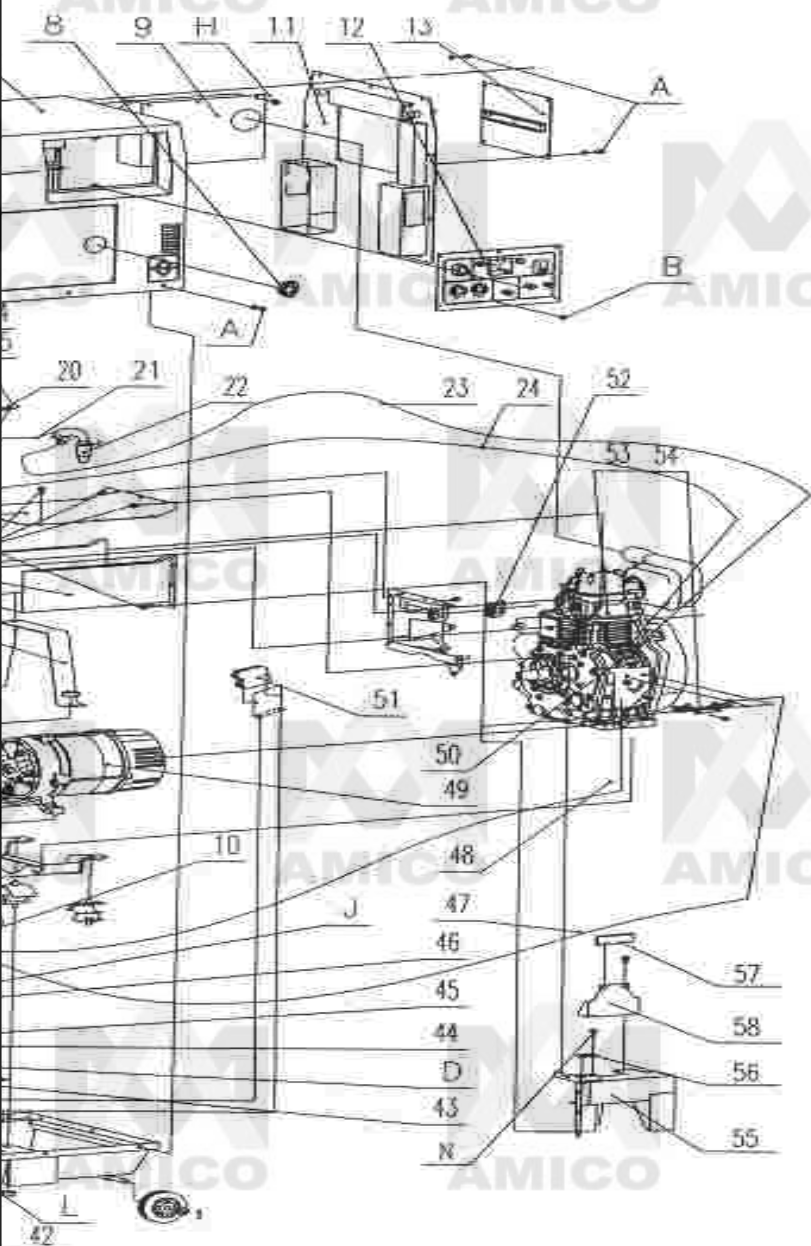

Number	Part Description	Quantity	Part Number
1	Silencer Cover	1	AH4000LN001
2	Silencer Bend	1	AH4000LN002
3	Left Board	1	AH4000LN003
4	Back Door	1	AH4000LN004
5	Fixing Sleeve For Observing Bore	1	AH4000LN005
6	Fixing Sleeve For Input Of Fuel Tank	1	AH4000LN006
7	Main Cover	1	AH4000LN007
8	Switch	1	AH4000LN008
9	Air Filter Baffle	1	AH4000LN009
10	Accelerator Electromagnet	1	AH4000LN010
11	Right Board	1	AH4000LN011
12	Output Panel Assembly	1	AH4000LN012
13	Cover Of Observing Bore For Air Filter	1	AH4000LN013
14	Cover Of Fuel Tank	1	AH4000LN014
15	Buoy For Oil Level Indication	1	AH4000LN015
16	Fuel Tank	1	AH4000LN016
17	Lining	1	AH4000LN017
18	Shock Absorption Mat	1	AH4000LN018
19	Clip	1	AH4000LN019
20	Clip	1	AH4000LN020
21	Fuel Inlet Pipe	1	AH4000LN021
22	Fuel Filter Assembly	1	AH4000LN022
23	Fuel Inlet Pipe	1	AH4000LN023
24	Fuel Leak-off Pipe	1	AH4000LN024
25	Cover Of U Type Chamfer	1	AH4000LN025
26	U Type Chamfer	1	AH4000LN026
27	Support Of U Type Chamfer	1	AH4000LN027
28	Output pipe	1	AH4000LN028
29	Gasket Of Silencer	1	AH4000LN029
30	Upper Silencer	1	AH4000LN030
31	Low Silencer	1	AH4000LN031
32	Back Cover Of Alternator	1	AH4000LN032
33	Bracket	1	AH4000LN033
34	Shock Absorption Mat	4	AH4000LN034
35	Tow Structure Of Accelerator	1	AH4000LN035
36	Electromagnet	1	AH4000LN036
37	Bracket Of Electromagnet	1	AH4000LN037
38	Long Cover	1	AH4000LN038
39	Chassis	1	AH4000LN039
40	Rolling Wheel On Chassis	4	AH4000LN040
41	Flat Key	4	AH4000LN041
42	Pin	4	AH4000LN042
43	Motherboard Of Accumulator	1	AH4000LN043
44	Accumulator	1	AH4000LN044
45	Bolt	1	AH4000LN045


Number	Part Description	Quantity	Part Number
46	Pressingplate Of Accumulator	1	AH4000LN046
47	Pulling Wire For Throttle	1	AH4000LN047
48	Pulling Wire For Turn-off	1	AH4000LN048
49	Alternator	1	AH4000LN049
50	Output Wind Leading Shaft	1	AH4000LN050
51	Manostat	1	AH4000LN051
52	Gasket Of Output Bore	1	AH4000LN052
53	Cf Series Diesel Engine	1	AH4000LN053
54	Pulling Role For Accelerator	1	AH4000LN054
55	Intake Wind Leading Shaft	1	AH4000LN055
56	Pressing Plate Of High Pressure Fuel Pipe	1	AH4000LN056
57	Shock Preventing Mat	1	AH4000LN057
58	Shock Preventing Holder	1	AH4000LN058
A	M6*16 Bolt,Flat Key	41	AH4000LN059
B	M6*8 Bolt	4	AH4000LN060
C	M4*8 Bolt	4	AH4000LN061
D	M6*12 Bolt	4	AH4000LN062
E	M10*45 Bolt	4	AH4000LN063
F	M6*16 Bolt	4	AH4000LN064
G	M8*25 Bolt	5	AH4000LN065
H	M6*12 Bolt	17	AH4000LN066
I	M5*8 Bolt	12	AH4000LN067
J	M6 Nut	2	AH4000LN068
K	M8 Nut*Flat Spring Washer	6	AH4000LN069
L	M10 Nut*Flat Spring Washer	12	AH4000LN070
M	M5*12 Bolt	2	AH4000LN071
N	M6*22 Bolt	2	AH4000LN072


12. PANEL DETAIL DIAGRAM

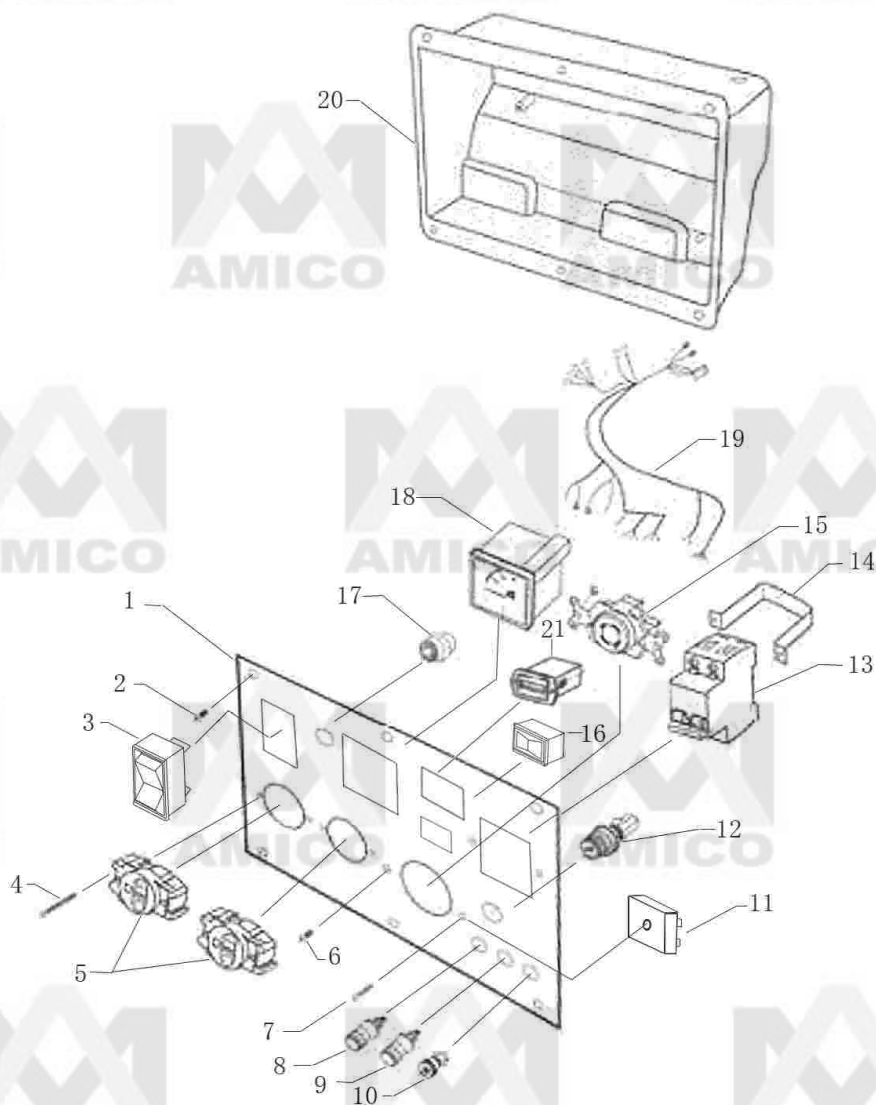

Number	Part Description	Quantity	Part Number
1	Panel	1	AH4000LN073
2	M6X12 Bolt	6	AH4000LN074
3	Starter Switch	1	AH4000LN075
4	M4X30 Bolt	4	AH4000LN076
5	3 Prong Socket	2	AH4000LN077
6	M4X15 Bolt	2	AH4000LN078
7	M5X25 Bolt	2	AH4000LN079
8	Positive DC Port	1	AH4000LN080
9	Negative DC Port	1	AH4000LN081
10	Grounded Bolt	1	AH4000LN082
11	Integrating	1	AH4000LN083
12	DC Fuse	1	AH4000LN084
13	Breaker	1	AH4000LN085
14	Breaker Bracket	1	AH4000LN086
15	4 Prong Socket	1	AH4000LN087
16	Current Adjusting Switch	1	AH4000LN088
17	Oil Alert Lamp	1	AH4000LN089
18	Voltmeter	1	AH4000LN090
19	Wiring Harness	1	AH4000LN091
20	Box	1	AH4000LN092
21	Hour meter	1	AH4000LN093

11.DETAIL DIAGRAM

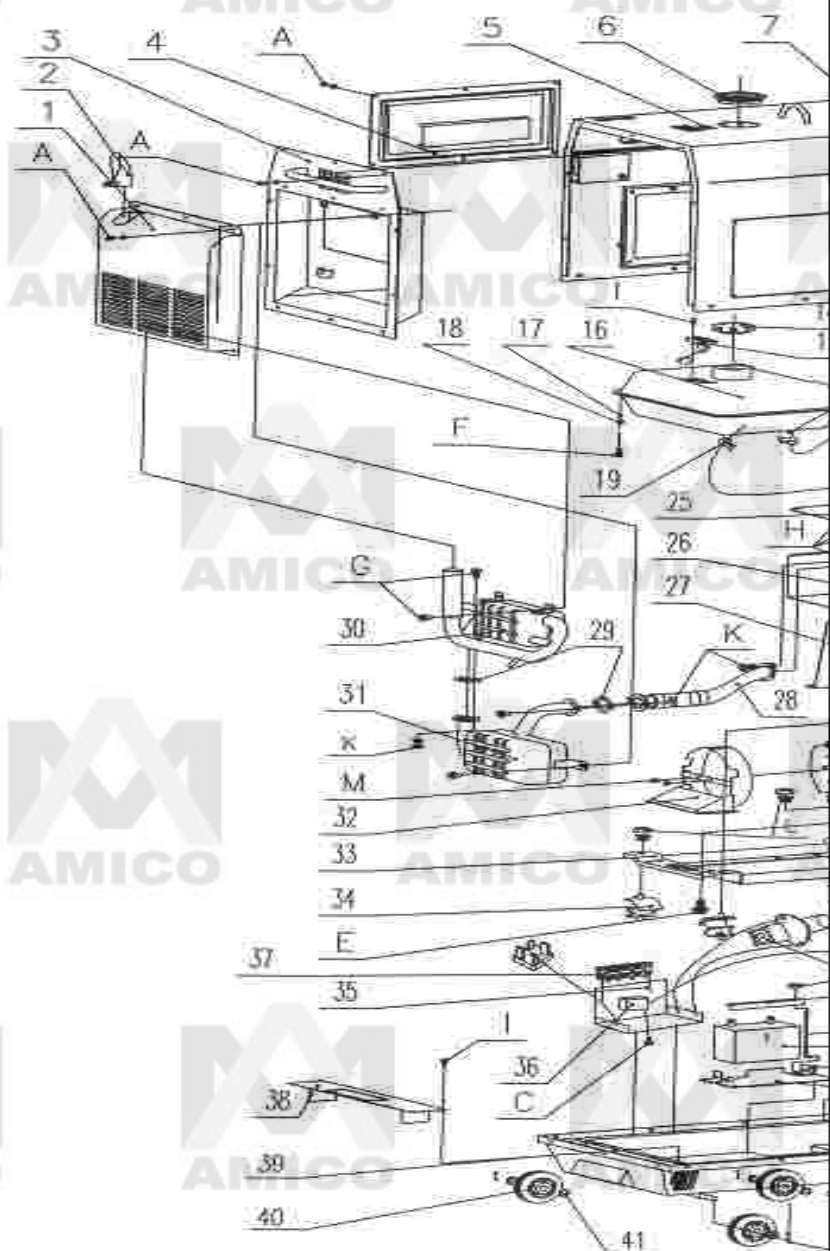


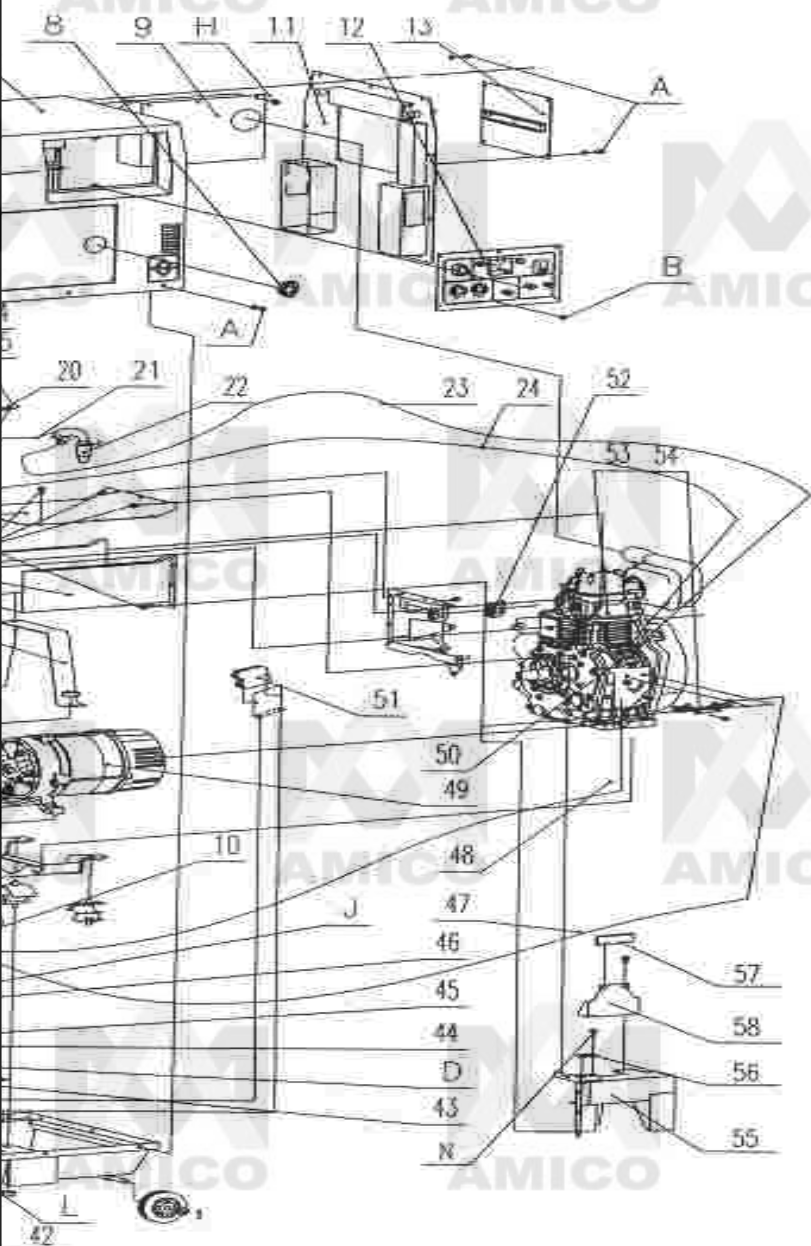

Number	Part Description	Quantity	Part Number
1	Silencer Cover	1	AH6000LN001
2	Silencer Bend	1	AH6000LN002
3	Left Board	1	AH6000LN003
4	Back Door	1	AH6000LN004
5	Fixing Sleeve For Observing Bore	1	AH6000LN005
6	Fixing Sleeve For Input Of Fuel Tank	1	AH6000LN006
7	Main Cover	1	AH6000LN007
8	Switch	1	AH6000LN008
9	Air Filter Baffle	1	AH6000LN009
10	Accelerator Electromagnet	1	AH6000LN010
11	Right Board	1	AH6000LN011
12	Output Panel Assembly	1	AH6000LN012
13	Cover Of Observing Bore For Air Filter	1	AH6000LN013
14	Cover Of Fuel Tank	1	AH6000LN014
15	Buoy For Oil Level Indication	1	AH6000LN015
16	Fuel Tank	1	AH6000LN016
17	Lining	1	AH6000LN017
18	Shock Absorption Mat	1	AH6000LN018
19	Clip	1	AH6000LN019
20	Clip	1	AH6000LN020
21	Fuel Inlet Pipe	1	AH6000LN021
22	Fuel Filter Assembly	1	AH6000LN022
23	Fuel Inlet Pipe	1	AH6000LN023
24	Fuel Leak-off Pipe	1	AH6000LN024
25	Cover Of U Type Chamfer	1	AH6000LN025
26	U Type Chamfer	1	AH6000LN026
27	Support Of U Type Chamfer	1	AH6000LN027
28	Output pipe	1	AH6000LN028
29	Gasket Of Silencer	1	AH6000LN029
30	Upper Silencer	1	AH6000LN030
31	Low Silencer	1	AH6000LN031
32	Back Cover Of Alternator	1	AH6000LN032
33	Bracket	1	AH6000LN033
34	Shock Absorption Mat	4	AH6000LN034
35	Tow Structure Of Accelerator	1	AH6000LN035
36	Electromagnet	1	AH6000LN036
37	Bracket Of Electromagnet	1	AH6000LN037
38	Long Cover	1	AH6000LN038
39	Chassis	1	AH6000LN039
40	Rolling Wheel On Chassis	4	AH6000LN040
41	Flat Key	4	AH6000LN041
42	Pin	4	AH6000LN042
43	Motherboard Of Accumulator	1	AH6000LN043
44	Accumulator	1	AH6000LN044
45	Bolt	1	AH6000LN045

Number	Part Description	Quantity	Part Number
46	Pressingplate Of Accumulator	1	AH6000LN046
47	Pulling Wire For Throttle	1	AH6000LN047
48	Pulling Wire For Turn-off	1	AH6000LN048
49	Alternator	1	AH6000LN049
50	Output Wind Leading Shaft	1	AH6000LN050
51	Manostat	1	AH6000LN051
52	Gasket Of Output Bore	1	AH6000LN052
53	Cf Series Diesel Engine	1	AH6000LN053
54	Pulling Role For Accelerator	1	AH6000LN054
55	Intake Wind Leading Shaft	1	AH6000LN055
56	Pressing Plate Of High Pressure Fuel Pipe	1	AH6000LN056
57	Shock Preventing Mat	1	AH6000LN057
58	Shock Preventing Holder	1	AH6000LN058
A	M6*16 Bolt,Flat Key	41	AH6000LN059
B	M6*8 Bolt	4	AH6000LN060
C	M4*8 Bolt	4	AH6000LN061
D	M6*12 Bolt	4	AH6000LN062
E	M10*45 Bolt	4	AH6000LN063
F	M6*16 Bolt	4	AH6000LN064
G	M8*25 Bolt	5	AH6000LN065
H	M6*12 Bolt	17	AH6000LN066
I	M5*8 Bolt	12	AH6000LN067
J	M6 Nut	2	AH6000LN068
K	M8 Nut*Flat Spring Washer	6	AH6000LN069
L	M10 Nut*Flat Spring Washer	12	AH6000LN070
M	M5*12 Bolt	2	AH6000LN071
N	M6*22 Bolt	2	AH6000LN072

12. PANEL DETAIL DIAGRAM

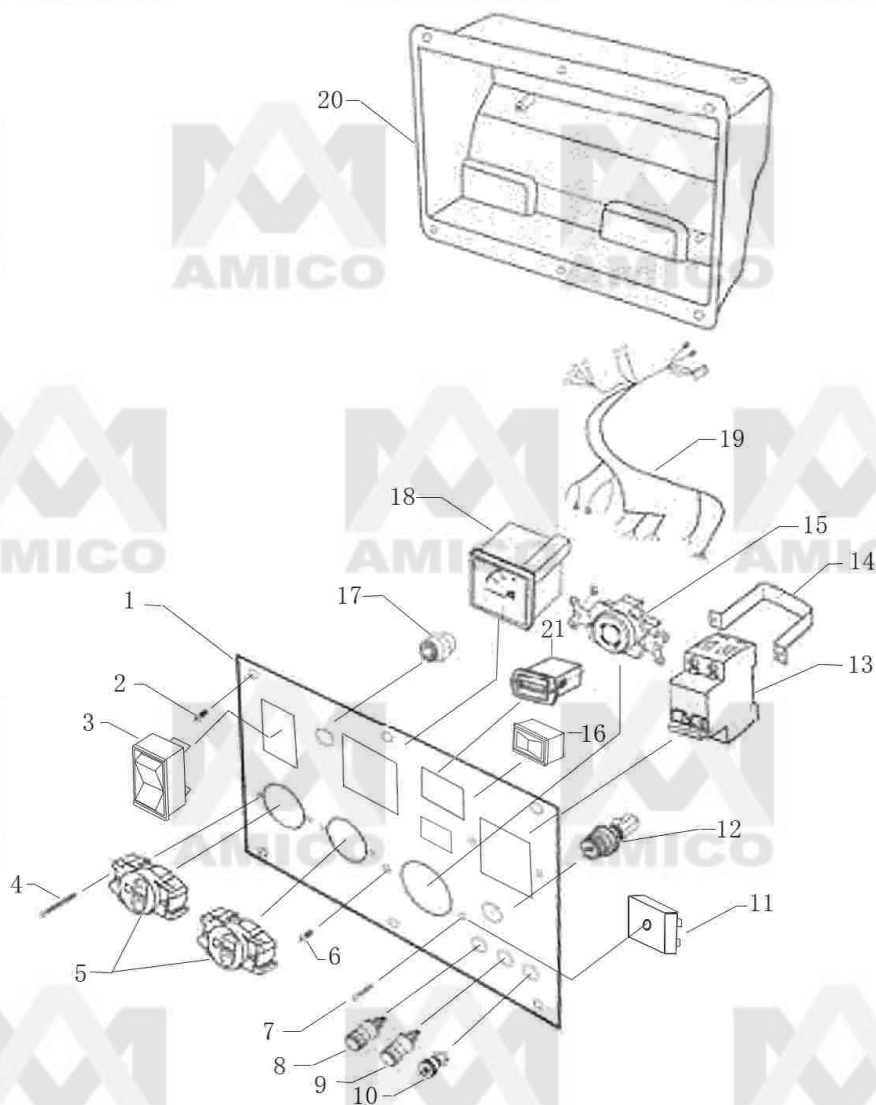

Number	Part Description	Quantity	Part Number
1	Panel	1	AH6000LN073
2	M6X12 Bolt	6	AH6000LN074
3	Starter Switch	1	AH6000LN075
4	M4X30 Bolt	4	AH6000LN076
5	3 Prong Socket	2	AH6000LN077
6	M4X15 Bolt	2	AH6000LN078
7	M5X25 Bolt	2	AH6000LN079
8	Positive DC Port	1	AH6000LN080
9	Negative DC Port	1	AH6000LN081
10	Grounded Bolt	1	AH6000LN082
11	Integrating	1	AH6000LN083
12	DC Fuse	1	AH6000LN084
13	Breaker	1	AH6000LN085
14	Breaker Bracket	1	AH6000LN086
15	4 Prong Socket	1	AH6000LN087
16	Current Adjusting Switch	1	AH6000LN088
17	Oil Alert Lamp	1	AH6000LN089
18	Voltmeter	1	AH6000LN090
19	Wiring Harness	1	AH6000LN091
20	Box	1	AH6000LN092
21	Hour meter	1	AH6000LN093