


1. Cylinder Block Assembly

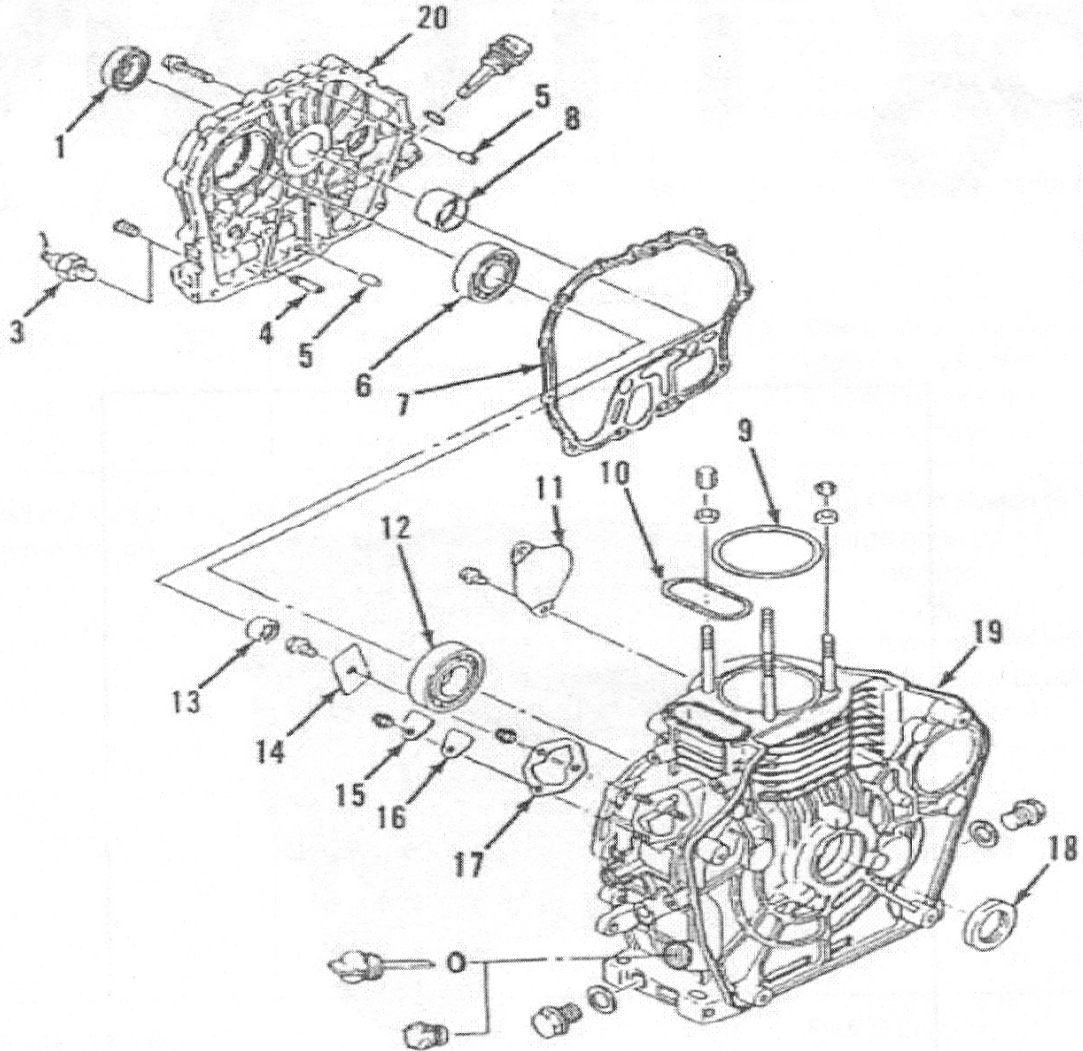

Part Name

1. PTO Oil Seal
3. Oil Sensor
4. Oil Pipe
5. Dowel Pins
6. Camshaft Roller Bearing
7. Crankcase Cover Gasket
8. Main Bushing
9. Cylinder Head Gasket
10. Push Rod O-ring
11. Starter Cover Plate

Titan Part #

- LCT-7552
LCT-016
LCT-7528A
LCT-7528B
LCT-7528C
LCT-7529
LCT-7557
LCT-7520
LCT-7513
N/A


Part Name

12. Crank Shaft Bearing
13. Camshaft Needle Bearing
14. Bearing Retainer Plate
15. Fuel Pump Cover
16. Fuel Pump Gasket
17. Fuel Pump Shim
18. Crankshaft Oil Seal
19. Cylinder Block
20. Crankcase Cover

Titan Part #

- LCT-7515
LCT-7514
LCT-7543
LCT-7537
LCT-7537A
LCT-7536
LCT-7552B
LCT-7553
LCT-7528

2. Crank Shaft Assembly

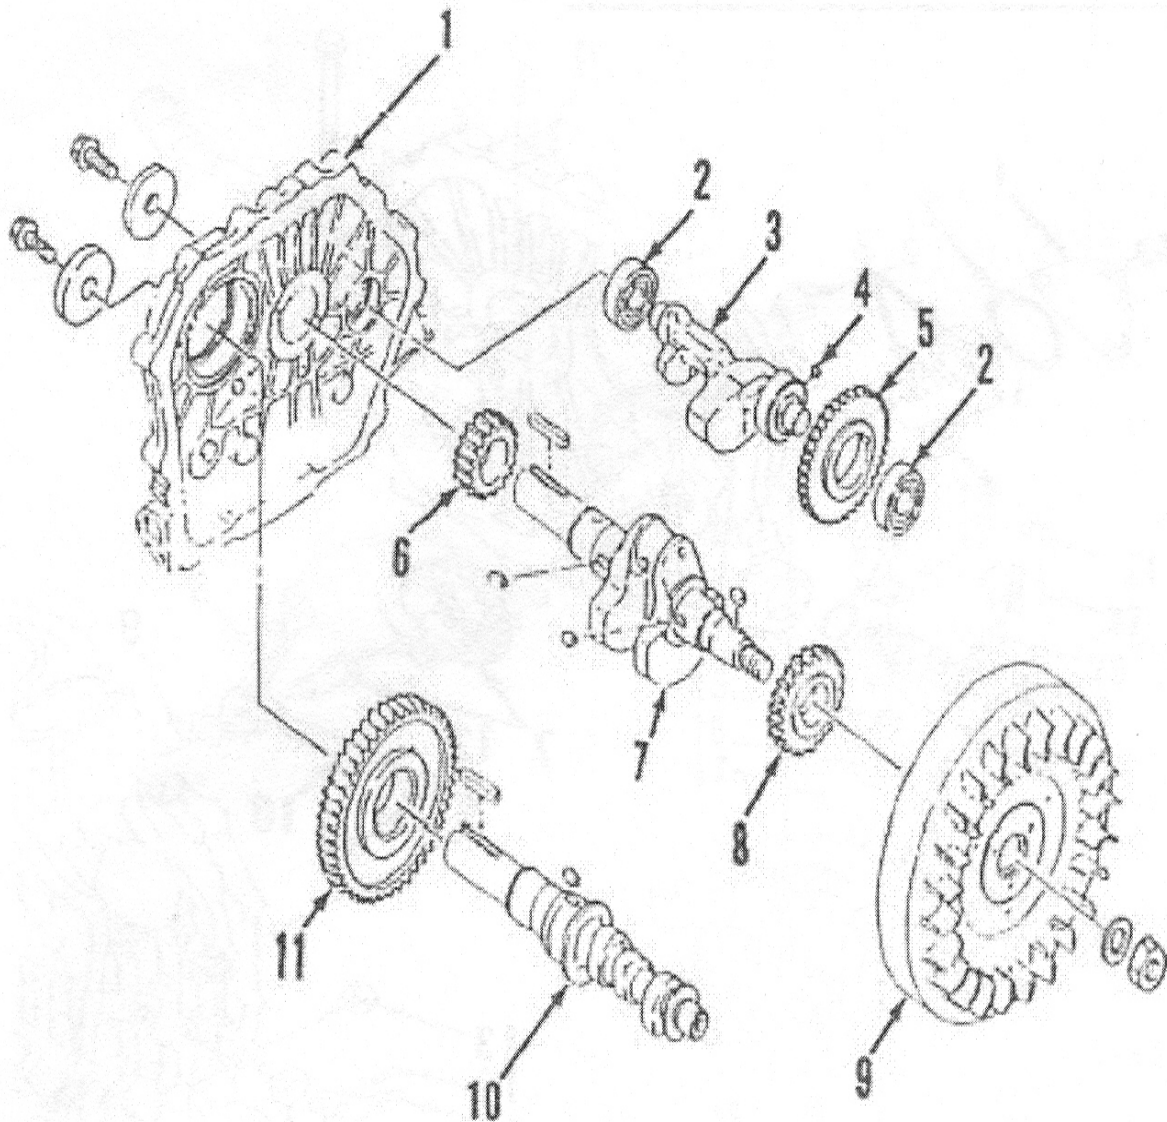

Part Name

1. Crankcase Cover
2. Balancer Shaft Bearing
3. Balancer Shaft
4. Key
5. Balancer Shaft Gear
6. Camshaft Driving Gear

Titan Part #

- LCT-7528
LCT-7522A
LCT-7522
LCT-7522B
LCT-7522C
LCT-7515A


Part Name

7. Crankshaft
8. Balancer Shaft Drive Gear
9. Flywheel
10. Camshaft
11. Camshaft Drive Gear

Titan Part #


- LCT-7515
LCT-7515A
LCT-7551
LCT-7514
LCT-7514A

3. Governor Gear Assembly

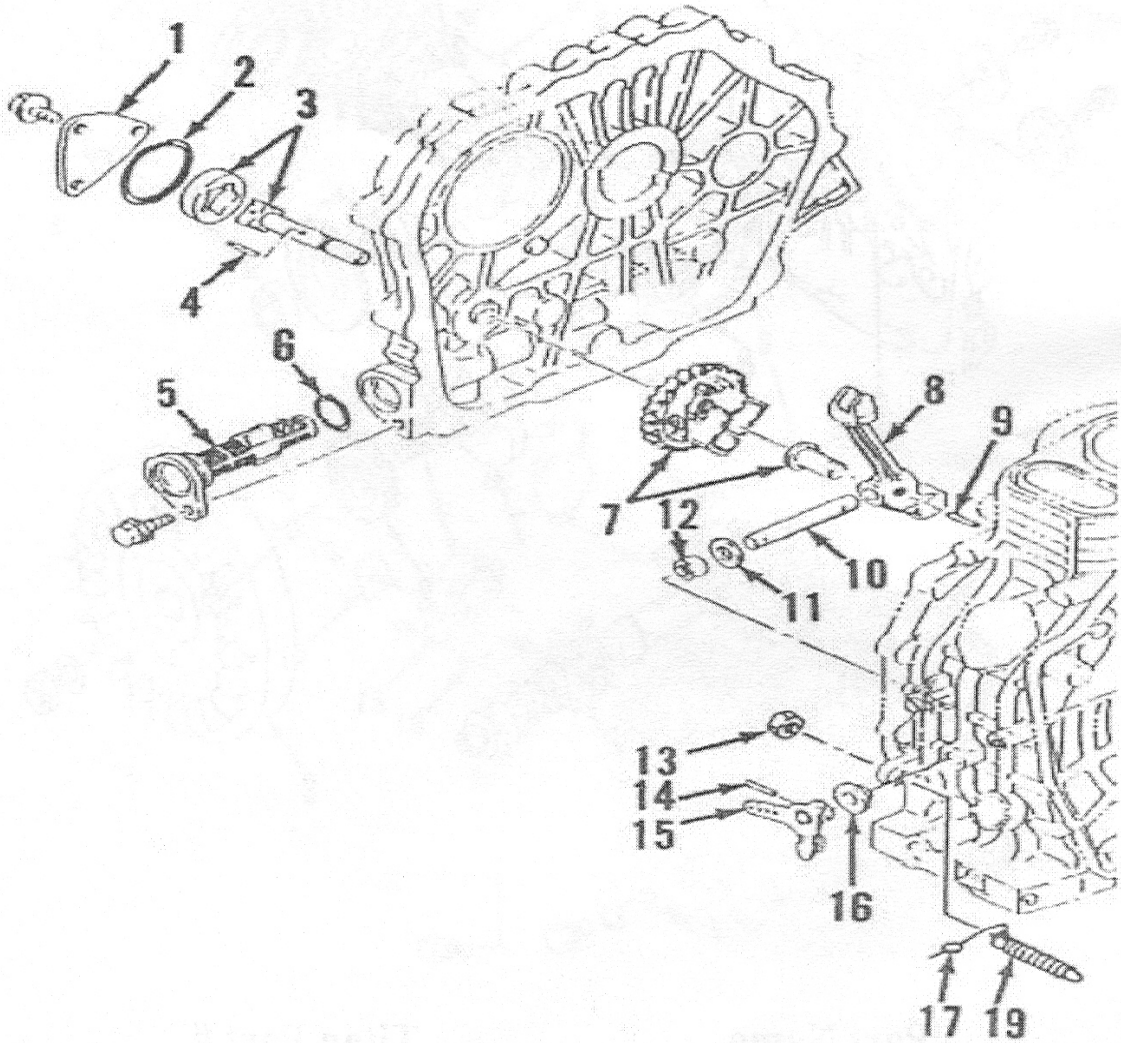

Part Name	Titan Part #	Part Name	Titan Part #
1. Oil Pump Cover	LCT-7522	10. Governor Arm Shaft	LCT-7525B
2. Oil Pump O-ring	LCT-7527	11. Flat Washer	N/A
3. Oil Pump	LCT-7523	12. Governor Shaft Needle Bearing	N/A
4. Oil Pump Drive Pin	LCT-7523A	13. Lock Nut	LCT-7526
5. Oil Filter	LCT-015	14. Dowel Pin	LCT-7525C
6. Oil Filter O-ring	LCT-015A	15. Governor Lever	LCT-7525D
7. Governor Assembly	LCT-7523	16. Governor Arm Shaft Oil Seal	LCT-7525E
8. Governor Arm	LCT-7525	17. Seal Wire	N/A
9. Dowel Pin	LCT-7525A	19. Governor Stop	LCT-7526A

4. Head Asssembly

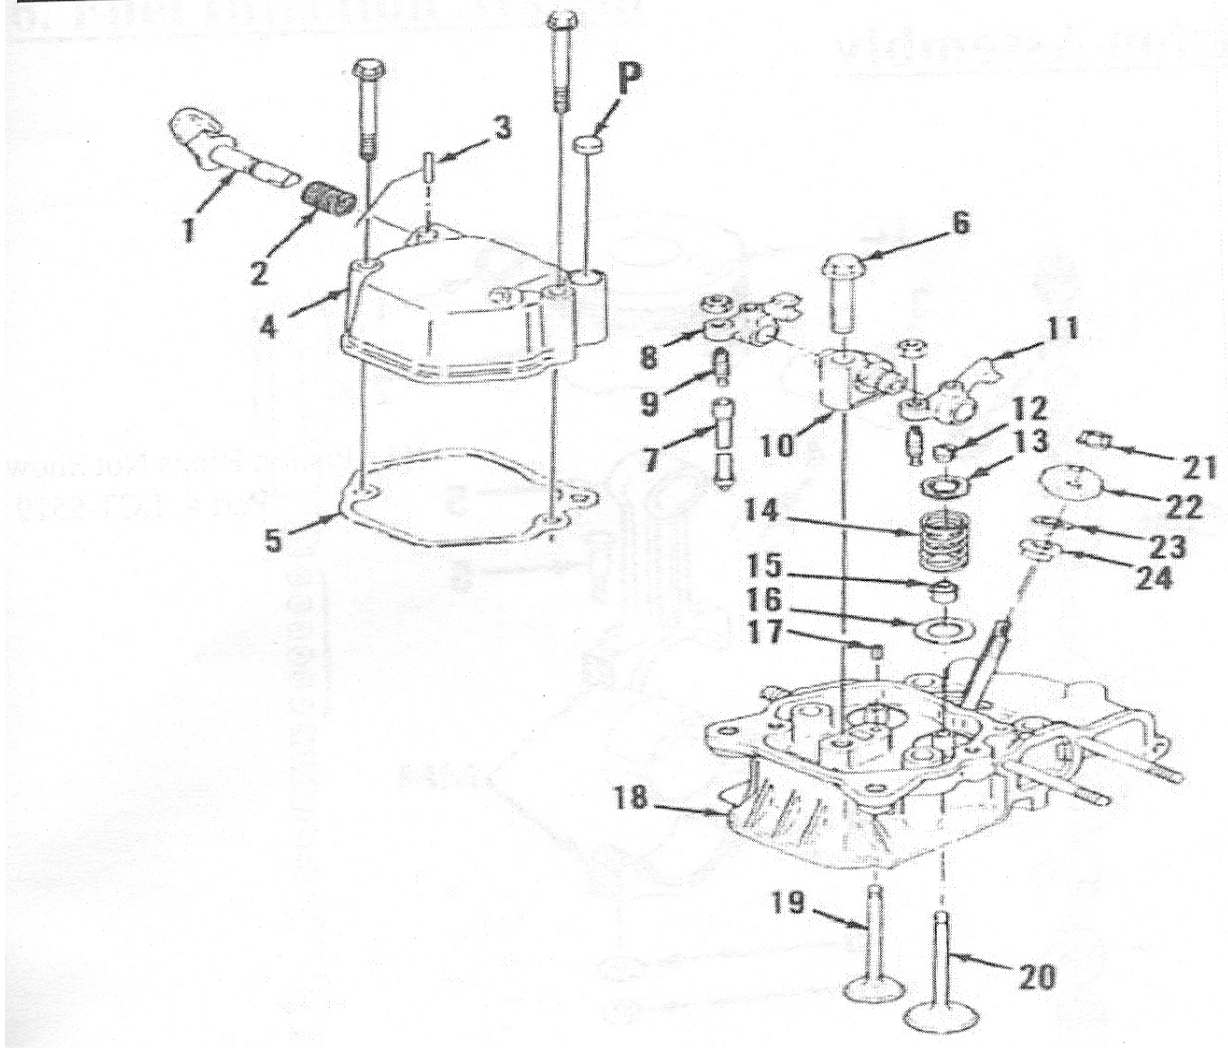

Part Name

1. Decompression Lever
2. Return Spring
3. Retaining Pin/Screw
4. Valve Cover Assembly
5. Valve Cover Gasket
6. Rocker Arm Bolt
7. Push Rod
8. Exhaust Rocker Arm
9. Valve Gap Adjusting Screw
10. Rocker Arm Support
11. Intake Rocker Arm
12. Valve Clip

Titan Part

- N/A
N/A
N/A
LCT-7530
LCT-7531
LCT-7541D
LCT-7512
LCT-7541A
LCT-7541C
LCT-7541
LCT-7541B
LCT-7511B


Part Name

13. Valve Retainer
14. Valve Spring
15. Valve Stem Oil Seal
16. Spring Washer
17. Dowel Pin
18. Cylinder Head
19. Exhaust Valve
20. Intake Valve
21. Fuel Injector Retainer Nut
22. Fuel Injector Retainer
23. Fuel Injector Spacer
24. Fuel Injector Nozzle Gasket

Titan Part

- LCT-7511A
LCT-7511C
LCT-7511D
N/A
LCT-7501
LCT-7501
LCT-7511E
LCT-7511
LCT-7504A
LCT-7504
N/A
LCT-7503

5. Piston Assembly

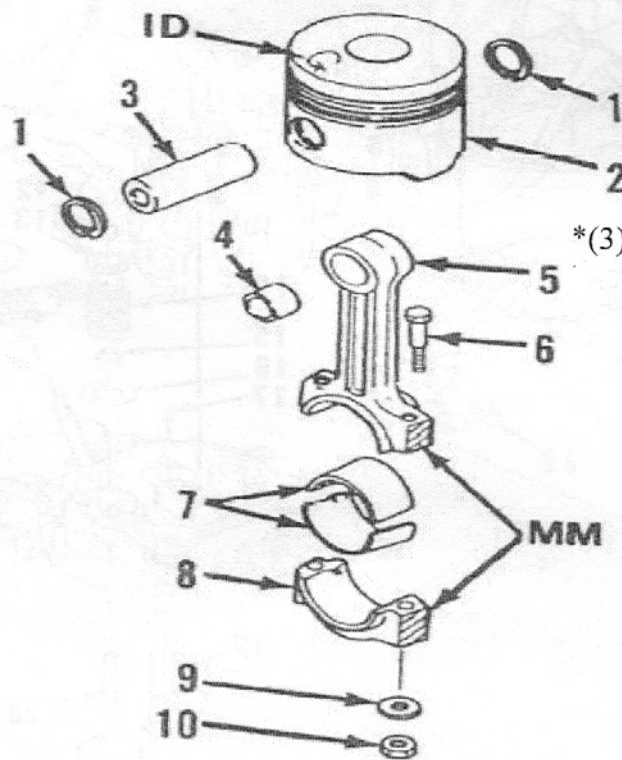

*(3) Piston Rings Not Shown
Part # LCT-5519

Part Name

1. Piston Pin Clamp
2. Piston
3. Piston Pin
- 3* Piston Ring Set
4. Piston Pin Bushing
5. Connecting Rod

Titan Part

- LCT-7516B
LCT-7516
LCT-7516A
LCT-7516C
LCT-7517A
LCT-7517


Part Name

6. Connecting Rod Bolt
7. Connecting Rod Bearing
8. Crank Pin Box
9. Washer
10. Nut

Titan Part


- LCT-7517B
LCT-7517C
LCT-7517D
N/A
N/A

6. Fuel Injection System

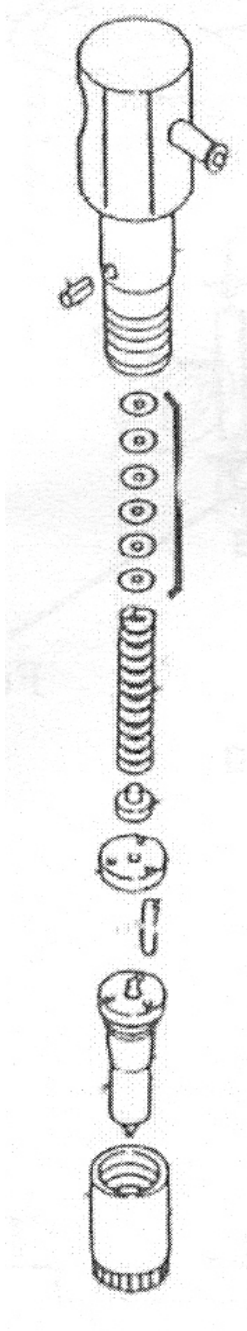

Part Name
1. Fuel Injector


Titan Part #
LCT-7502

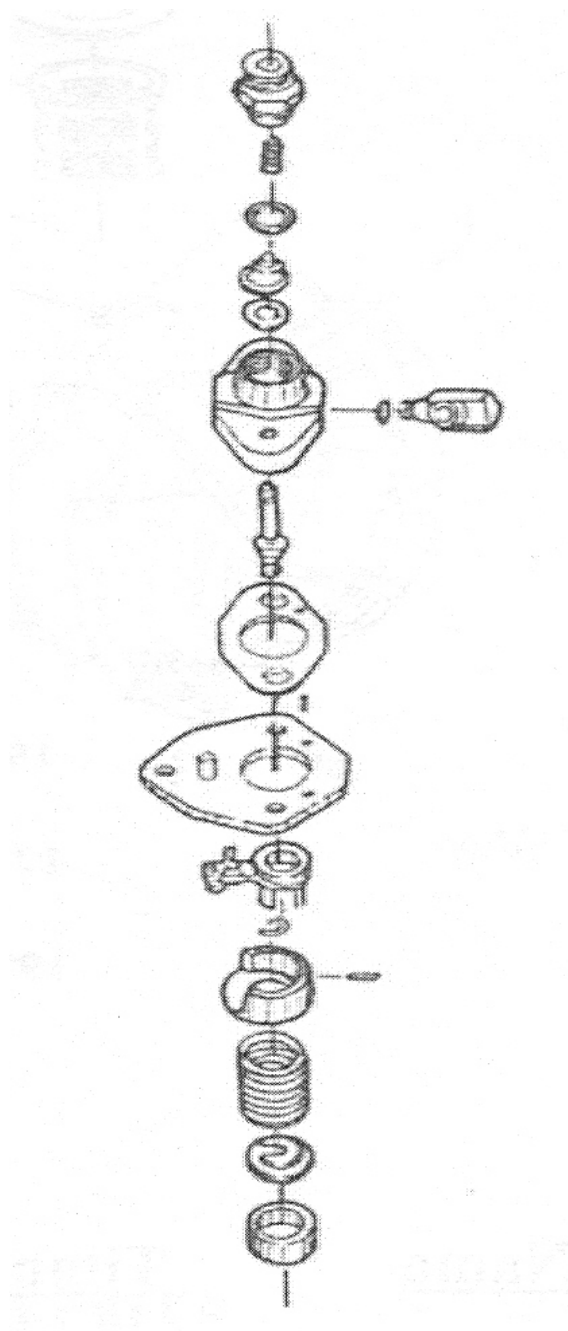

Part Name
2. Fuel Pump

Titan Part #
LCT-7535

7. Fuel System

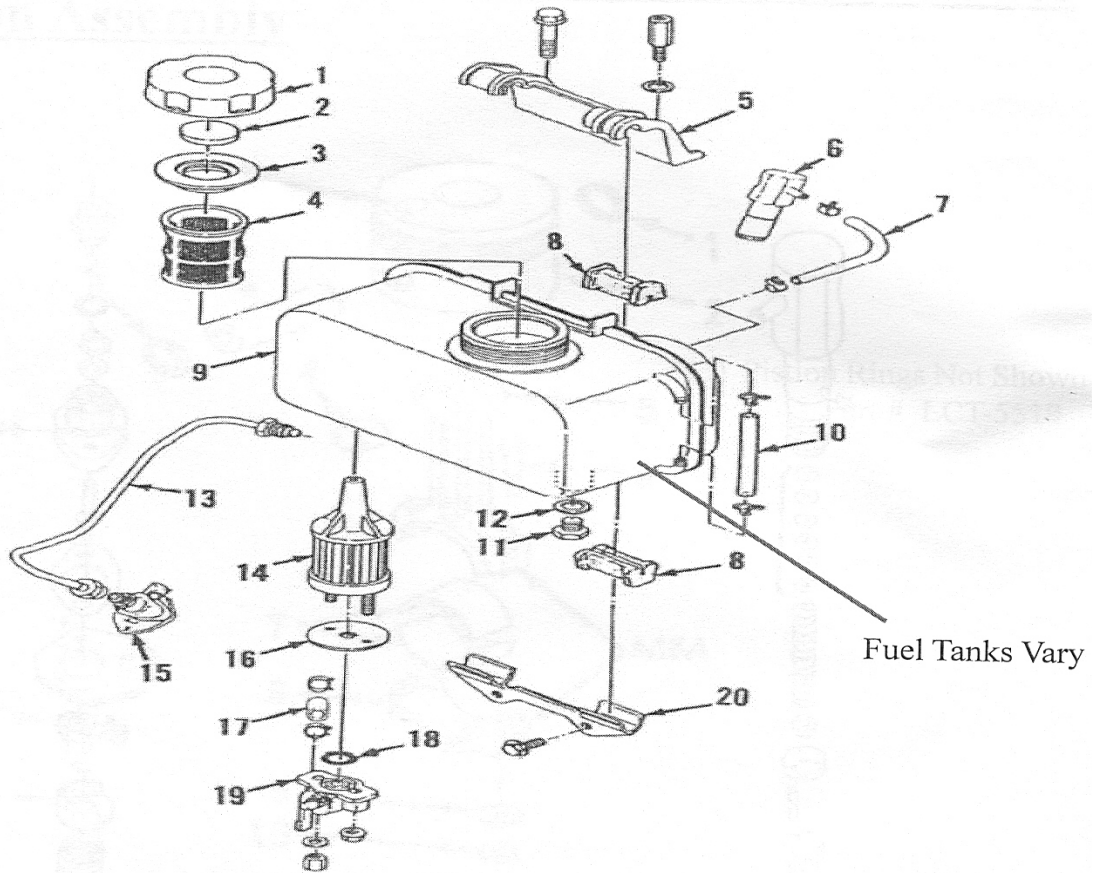

Part Name

1. Fuel Tank Filler Cap
2. Fuel Cap Seal
3. Fuel Cap Gasket
4. Fuel Filter/Strainer
5. Upper Mounting Support
6. Fuel Injector
7. Fuel return Line
8. Vibration Dampers
9. Fuel Tank
10. Fuel Gauge

Titan Part

- LCT-009
- LCT-009B
- LCT-009C
- LCT-009A
- N/A
- LCT-7502
- LCT-057
- N/A
- LCT-008
- LCT-008A


Part Name

11. Oil Drain Plug
12. Gasket
13. High Pressure Fuel Line
14. Fuel Filter
15. Fuel Injector Pump
16. Fuel Filter Plate
17. Rubber Fuel Line
18. O-ring
19. Fuel Shutoff Valve
20. Lower Mounting Support

Titan Part

- N/A
- N/A
- LCT-7550
- LCT-010
- LCT-7535
- LCT-10A
- LCT-056
- LCT-011
- LCT-012
- N/A

8. Starter Assembly

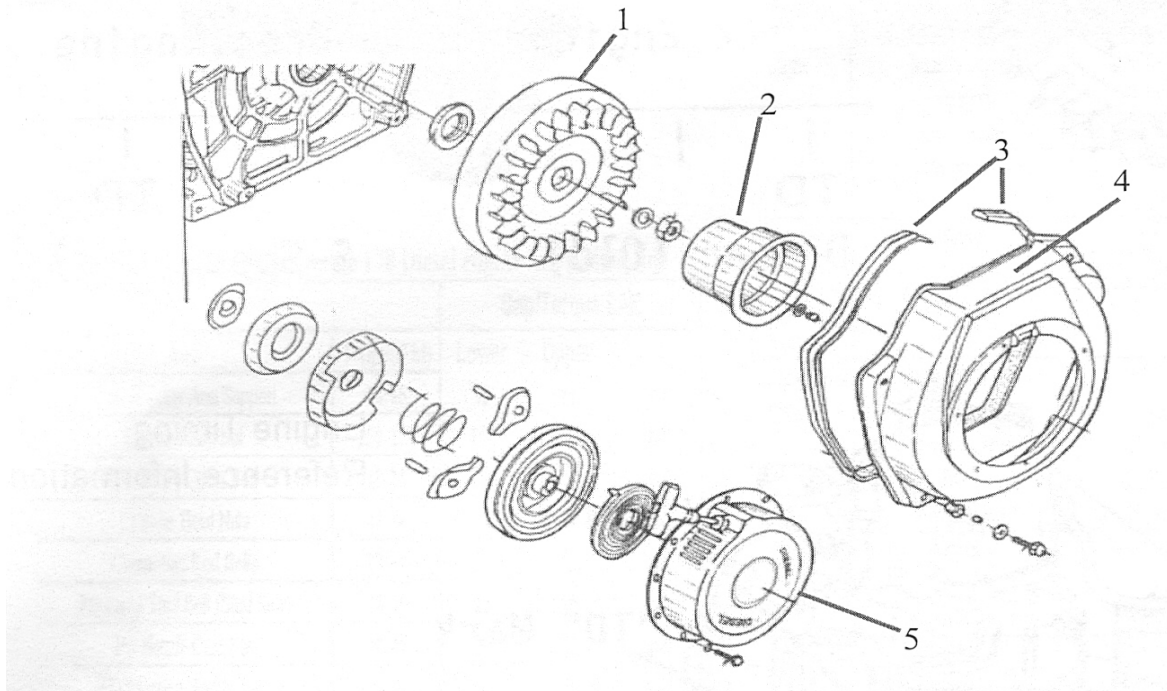

Part Name

- 1. Flywheel
- 2. Recoil Starter Pulley
- 3. Blower Housing Gasket

Titan Part #

- LCT-7551
- LCT-7544
- LCT-7546

Part Name

- 4. Blower Housing
- 5. Recoil Starter Assembly

Titan Part #

- LCT-7545
- LCT-7542